



**USER MANUAL
FOR
iGuardStove**
Turn your stove into a Smart Stove
Automatic Stove Shut Off

MODELS

- IGSE 4**
- IGSE 3 (US only)**

Kelowna, B.C. Canada
www.iguardsfire.com
1-844-859-3838

TABLE OF CONTENTS

| | |
|--------------------------|---------|
| SAFETY | Page 2 |
| GETTING STARTED | |
| What's in the Box | Page 3 |
| Quick Install Guide | Page 4 |
| OPERATION | |
| Control Panel | Page 5 |
| Default Factory Settings | Page 6 |
| Display Screen Settings | Page 7 |
| Specifications | Page 10 |
| WARRANTY | Page 11 |
| REFUND & RETURN POLICY | Page 12 |

Safety

Read this manual first before installing. When properly cared for, your new iGuardStove has been designed to be safe and reliable.

Hire a professional if you are uncomfortable performing the installation yourself. In most situations the installation of iGuardStove does not require the use of a licensed electrician. However, a licensed electrician must install iGuardStove if the stove is:

- Presently hard-wired (not plugged into an existing 4 prong range wall outlet) or
- Uses an outdated range wall outlet (other than a 3 or 4 prong).

iGuardStove must only be connected to a 125-250 VAC grounded 4 prong range wall outlet or 3 prong ungrounded (US only).

NOTE: The ISGE3 3 prong ungrounded (US only) power box has a ground stud that is used to connect the power box to the home's grounding system. UL requires that this ground connection be completed during installation of the iGuardStove

Do not disassemble any of the components. There are no user serviceable parts inside. Refer servicing to a qualified person only with iGuardFire's permission to open up the power box.

Note: Do Not Install Control Panel if:


- Directly above a heat source or where hot air or steam will blow onto it
- On or above a microwave or toaster oven
- Directly on or above the stove

What's In The Box

Control Panel



Power Box

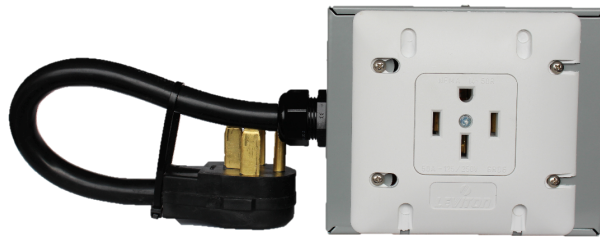

7' Network Cable



2 -Screws




Note: Please confirm that screw length will not penetrate into the inside surface of the upper cabinet

Quick Install Guide

1. Ensure that the stove is off and fully cooled down. Turn off the stove's main breaker.
2. Pull the stove away from the wall and unplug stove from wall outlet.
3. Plug **iGuardStove** power box into the wall outlet.
4. Plug the stove cord into the **iGuardStove** power box.
5. Connect one end of the network cable into the **iGuardStove** power box.
6. Make sure the **iGuardStove** power box and cables are out of the way, and then slide the stove back into place. You could use masking tape to prevent the network cable from falling behind the stove.
7. Connect the other end of the network cable into the back of the **iGuardStove** control panel. Use the cable channel on the back plate to secure the cable. Cable covers are available from Home Depot in different colors to help protect the cable against the wall.
8. Mount the **iGuardStove** control panel underneath the upper kitchen cabinet beside the stove and close to the front where it has a good view of the cooking area and is easy to reach. If using screws remove the clear plastic hole plugs. Do not mount above the stove or in other hazardous spots.
9. Turn the stove's main breaker back on and you are ready to cook
If you are NOT connecting the device to the home's Wi-Fi then you are finished. If you need to connect the **iGuardStove** to the Wi-Fi then continue with step 10 below. Cut out the end of the shipping box that has the label with the MAC address on it. **Save it** for the next step in the set up and then put it in a safe place in case you need it for reference.
10. Refer to the control panel and touch the Menu button.
11. Using the Up Down arrows scroll down to **Wireless Setup** and press Select.
12. Scroll to Scan for Networks and press Select.
13. When your home's Wi-Fi network appears scroll and Select it.
14. Enter the password for the network using the Up Down arrows to select the characters and the Next button to move to the next position.
15. Press Select after the final character has been entered and the device will connect.
16. After a Successful Connection press Back until you return to the Main Screen.
17. Your installation is complete! Please refer to **How To Setup Your Online Account at <http://iguardfire.com/online-account-info/>**

Control Panel

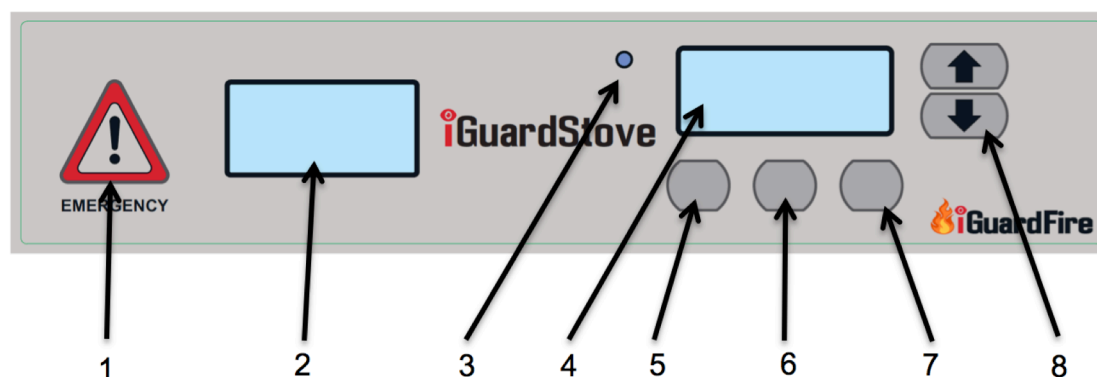

1. EMERGENCY BUTTON. See Online Account Help section on our website <http://www.iguardsfire.com/online-account-info/>
2. MOTION SENSOR
3. LED STROBE for hearing impaired. See Audible and Visual Alerts section on our website. <http://www.iguardsfire.com/online-account-info/>
4. LCD Display Screen
5. BUTTON – Button action is situational and changes depending on whatever feature is displayed on the LCD directly above the button.
6. BUTTON – Button action is situational and changes depending on whatever feature is displayed on the LCD directly above the button.
7. BUTTON – Button action is situational and changes depending on whatever feature is displayed on the LCD directly above the button.
8. UP DOWN Arrows for moving the cursor and selecting options on the LCD

Default Factory Settings

These instructions should be used if the device is NOT connected to the Wi-Fi. Once connected some options will not appear.

The factory default settings that can be used out of the box without having Wi-Fi are an Auto shut off timer set at 5 minutes and a manual timer set at 2 hours.

These settings can be changed if you activate your Online Account.

1. POWER

When the iGuardStove is installed it is powered on all the time. It is in one of two modes. Either in Standby/Sleep or is in normal operational. It draws almost no power while in the Standby/Sleep mode so you will not need to shut it off.

NOTE: If the device has automatically had to shut off the stove after 20 minutes, the iGuardStove will go into Sleep mode and the "Reset" button will need to be pushed to start again.

2. AUTO SHUT OFF OPERATION

This mode is totally automatic and once the stove knob is turned on it requires no interaction from the user to initiate cooking or to resume cooking after an Auto Shut off.

3. INITIATE COOKING

Once you turn on the stove knob, the iGuardStove senses the current draw and wakes up and switches from Standby into the Auto Countdown mode. If you are moving around the kitchen inside the sensor zone the timer will keep constantly resetting to the maximum countdown time. If it's set at say 5 minutes then it will keep resetting to 5 minutes. Once you move out of sensor range, approximately 10-12 feet (3-4m) line of sight from the sensor is when the clock will start to count down from that maximum time.

As the timer gets down to a pre-set time PRIOR to shutting off the beeper and strobe will become active. The beep and strobe will warn the user 10 seconds before of the impending shut off of the stove. Upon hearing the 1-second beeps and/or seeing the strobe the user can walk back into the sensor field of view thereby resetting the countdown timer back to its maximum setting. This will allow the cooking to continue uninterrupted.

4. RESUME COOKING

AFTER the iGuardStove has shut down, the stove beeps and strobes will continue at 2 per second for 10 seconds.

Upon returning to the kitchen the sensor will see the user and automatically turn the stove back on with no interaction required by the user.

NOTE: AFTER THE IGUARDSTOVE AUTO SHUTS OFF THE STOVE AND IS WAITING FOR SOMEONE TO RETURN IT WILL ONLY HOLD THIS WAITING STATE FOR 20 MINUTES. AFTER THAT IT WILL ASSUME THAT IN FACT THE USER WILL NOT BE COMING BACK ANYTIME SOON AND IT WILL GO TO SLEEP AND THE ONLY WAY TO RESUME COOKING IS TO USE THE "RESET" BUTTON ON THE FRONT PANEL.

5. MANUAL TIMER

Push the button labeled Manual Timer in order to set the oven and stovetop into Manual Mode. This mode is required if oven and stovetop are needed to operate for times that are longer than the auto shut off times. When in Manual mode use the up down arrows to set the hours and minutes that you want to have the stove or oven operate.

In Manual Mode the maximum time is 6 hours and 59 minutes. The oven or stove will automatically start cooking and the timer will count down. The timer controls both the Stove top and Oven.

NOTE: This mode is mostly for the oven so the user can cook a roast or a chicken but it also affects the stovetop as well.

Display Screen Settings

UPDATE SETTINGS

Once changes are made to the Internet settings the iGuardStove may require that you "Pull" the updates to the device. This is accomplished by selecting "Update Settings" feature. Push "Menu"


button and then using the side "Up" and "Down" arrows select "Update Settings".

After it is confirmed that the update is finished you can back out by using the Back button.




DISPLAY SETTINGS

Choose **Select** to enter Display Settings

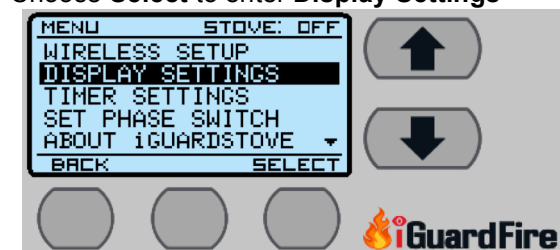

Adjust the settings to your desired effect using the **Up Down** arrows.

Use **Next** to move from **Brightness** to **Contrast**

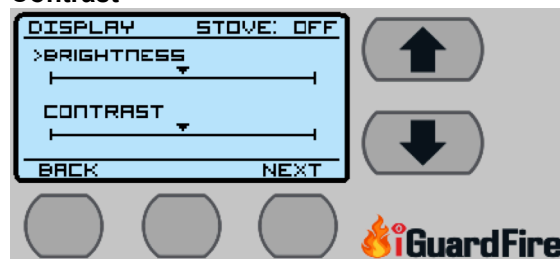


When happy with your choice use the **Back** to return to the **Main** screen

WIRELESS SETUP

To set up the network choose **MENU** on the control panel.




Scroll to **Wireless Setup** using the **Up Down** arrows and choose **Select**

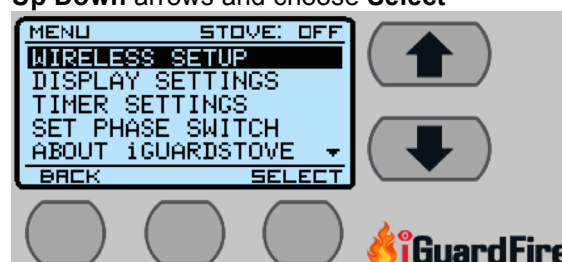

Choose **Scan for Networks...**




Choose your network and then **Select**.

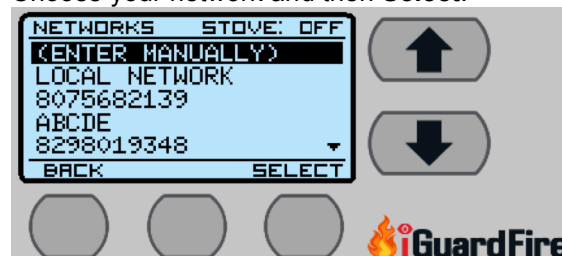

Then enter your password using the **UP Down** arrows to **Select** and then move to next digit using the lower arrows.

After a **Successful Connection** use **Back** to get to **Main** screen

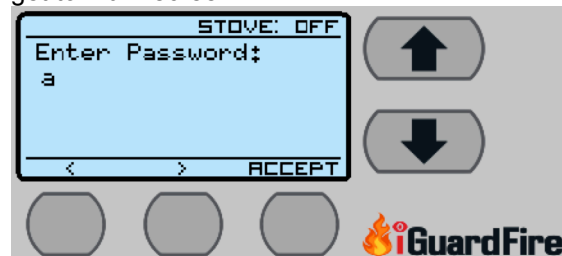

TIMER ADJUSTMENTS

NOTE: This option will only appear if the device has NEVER been connected to Wi-Fi.

If you do not see the option, but want this ability you must reset the device's Factory Defaults. Keep in mind when you do this you lose the Wi-Fi connection and those features.

This is to change the default times for both the Auto Shut Off Timer and the Manual Timer. While inside MENU use the "Up Down" arrows to scroll down to "Timer Settings" and press "Select".

Choose **Select** to enter **Timer Settings**




You will see the two choices for either setting. **Select** one and then you will move into that setting.



Use the **Up Down** arrows to select between 1 and 15 minutes.

Use **Back** to accept the new time.

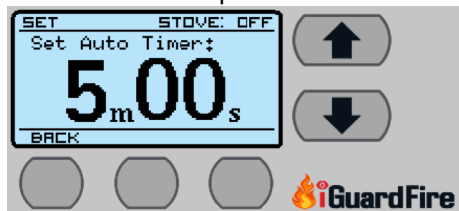


Use the **Up Down** buttons to select between 30 minutes and 5 hours.

Use **Back** to accept the new time.



SET PHASE SWITCH

iGuardStove has the ability to turn off the stove without killing power to the clock. But each stove is different as to how this is accomplished. The Phase Setting may have to be changed depending on the brand of stove you use. Once the iGuardStove is operational check to see if the clock remains on, and that the device is fully functional. If needed change the Phase Setting and retest the stove.

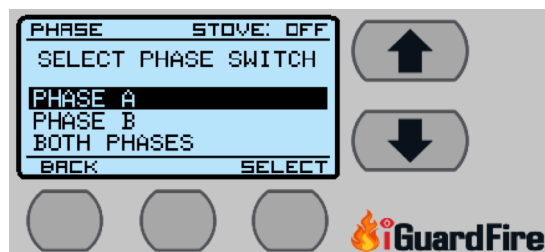

About iGuardStove

This option tells you the MAC address of your device as well as the software version



RESTORE FACTORY DEFAULTS

This will erase any Internet settings and reset the device back to factory default settings.

NOTE: When connected to the Wi-Fi the ability to adjust the Auto and Manual timers using the Display Panel will disappear. You can manage these settings using your Online Account. In order to get the option to reappear on the Display you must restore the factory defaults. But keep in mind this will then disconnect you from the Wi-Fi and you will lose those online features.






Specifications

| | |
|-----------------------|---|
| Control Panel | 9.7 x 2.3 x 2.2 inches |
| Power Box | 6.5 x 5.5 x 2 inches |
| Voltages | Input: 125/250 VAC 40 amp |
| | Output: 125/250 VAC |
| Wi-Fi | Yes |
| Plugs and Receptacles | NEMA 14-50 Standard Power Box has a 12 inch cord NEMA 10-50 U.S. Only |
| Power Box to Control | 6' Cat5e cable with RJ45 ends |
| Default Settings | 5 minute auto shut off 3 hour manual timer |
| Firmware | Updateable with Wi-Fi |
| Warranty | 2 year std. 3, 4 and 5 available |
| Certification | - CSA C22.2 No. 205 - UL 2017 - QAI File # E10697-1501 |

| MODELS | |
|---------------------|--------------|
| Electric - Standard | IGSE3, ISGE4 |
| Electric - Cooktop | IGSEC |
| Gas - Standard | IGSG |
| Gas - Cooktop | IGSGC |

Installation Requirements:
 Electric - no electrician needed
 Gas - needs gas fitter
 Cooktops - needs Electrician or Gas fitter

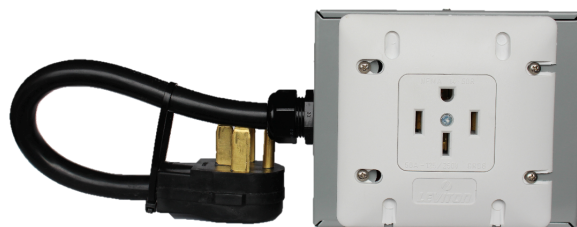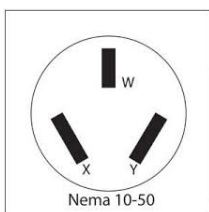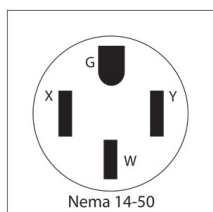

Power Box and cord

ISGE4 - Canada
and US



ISGE3 – U.S.
Only



Warranty

1. iGuardFire warrants, to the original purchaser, this product against defects in materials workmanship for a period of one (1) year from the date of original purchase. During this period iGuardFire Ltd. will repair or replace a defective product or part, at their discretion, with a new or refurbished product without charge. No warranty shall apply when damage is caused, or repair is required, due to any of the following;

- a) Use of the product for other than the intended purpose,
- b) Accident alteration abuse or miss use of the appliance
- c) Inaccurate mounting location or poor workmanship during installation

2. These warranties and remedies are exclusive and all other warranties, expressed or implied, written or oral, including the implied warranties of merchantability or fitness for any particular purpose are excluded

3. To receive warranty consideration a return goods authorization number (RGA) must be obtained by either phoning 844-859-3838 or email at sales@iguardfire.com. If a warranty registration has not been received by iGuardFire Ltd. via, the online setup of the account, a proof of purchase must accompany the returned product once an RGA number is received.

4. The defective product must be returned to the address included with the RGA.

All transportation and insurance costs to buy guard fire are the responsibility of the owner iGuardFire Ltd. will pay for the return costs please include a brief description of the problem contact name and phone number RGA number and a complete return address.

Product Liability

5. iGuardFire Ltd. shall not be liable for any loss damage (including without limitation direct or indirect damages for personal injury property damage loss of business profits business interruption or any other pecuniary loss) or expense arising directly or indirectly out of the purchase installation or operation of the products.

6. In no event shall iGuardFire Ltd. be liable for special, indirect, incidental or consequential damage of any kind or nature due any cause.

7. iGuardFire Ltd. neither assumes or authorizes any representative or other person to assume for it any obligation or liability other than is expressly set forth herein.

8. The laws of the province of British Columbia Canada govern this agreement the products and accompanying instructions and manuals the purchaser and any other related parties further agree that any litigation shall be commenced in the courts in the city of Kelowna in the province of British Columbia, Canada.

9. This warranty does not cover any incidental or consequential damages and is in lieu of all other warranties expressed or implied and no representative or person is authorized to assume for us, any other liability in connection with the sale of our products.

Refund & Return Policy

Option 1 – No Refunds/Exchanges:

We do not accept returns or exchanges unless the item you purchased is defective. If you receive a defective item, please contact us at sales@iGuardFire.com with details of the product and the defect. You can send the item you consider defective to:

Upon receipt of the returned product, we will fully examine it and notify you via e-mail, within a reasonable period of time, whether you are entitled to a refund or a replacement as a result of the defect. If you are entitled to a replacement or refund, we will replace the product or refund the purchase price, using the original method of payment.

Option 2 – Refunds Permitted:

We accept returns. You can return unopened items in the original packaging within 30 days of your purchase with receipt or proof of purchase. If 30 days or more have passed since your purchase, we cannot offer you a refund or an exchange.

Upon receipt of the returned item, we will fully examine it and notify you via email, within a reasonable period of time, whether you are entitled to a return. If you are entitled to a return, we will refund your purchase price and a credit will automatically be applied to your original method of payment.

We only exchange goods if they are defective or damaged. In circumstances where you consider that a product is defective, you should promptly contact us at sales@iGuardFire.com with details of the product and the defect. You can send the item you consider defective to the address provided by email.

Upon receipt of the returned product, we will fully examine it and notify you via e-mail, within a reasonable period of time, whether you are entitled to a replacement as a result of the defect. If you are eligible, we will send you a replacement product.

Shipping

To return the item you purchased, please mail it to:

Call for RMA first. No items shall be returned without an RMA being issued by iGuardFire.

Refunds do not include any shipping and handling charges shown on the packaging slip or invoice. Shipping charges for all returns must be prepaid and insured by you. You are responsible for any loss or damage to hardware during shipment. We do not guarantee that we will receive your returned item. Shipping and handling charges are not refundable. Any amounts refunded will not include the cost of shipping.

DELIVERY POLICY

General Information

All orders are subject to product availability. If an item is not in stock at the time you place your order, we will notify you and refund you the total amount of your order, using the original method of payment.

Delivery Time

An estimated delivery time will be provided to you once your order is placed. Delivery times are estimates and commence from the date of shipping, rather than the date of order. Delivery times are to be used as a guide only and are subject to the acceptance and approval of your order. Unless there are exceptional circumstances, we make every effort to fulfill your order within [15] business days of the date of your order. Business day means Monday to Friday, except holidays.

Date of delivery may vary due to carrier shipping practices, delivery location, method of delivery, and the items ordered.

Delivery Instructions

You can provide special delivery instructions on the checkout page of our website.

Shipping Costs

Shipping costs are based on the weight of your order and the delivery method. To find out how much your order will cost, simply add the items you would like to purchase to your cart, and proceed to the checkout page. Once at the checkout screen, shipping charges will be displayed. Additional shipping charges may apply to remote areas or for large or heavy items. You will be advised of any charges on the checkout page.

Sales tax is charged according to the province or territory to which the item is shipped.

Damaged Items in Transport

If there is any damage to the packaging on delivery, contact us immediately at sales@iGuardFire.com

Questions If you have any questions about the delivery and shipment of your order, please contact us at **844-859-3838**